


OIL CHECK VALVE

- Remove the bushing ①, oil check valve ball ② and spring ③ from the right crankcase cover.

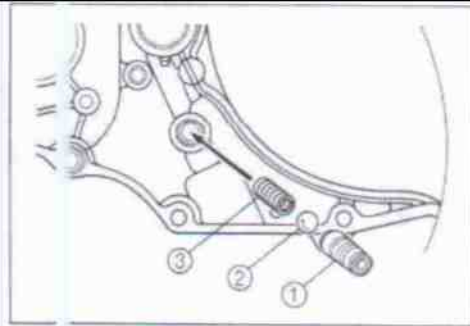

- Install the spring ③, oil check valve ball ② and bushing ① to the right crankcase as shown.

⚠ CAUTION

The rubber part of bushing ① must face to the outside.

